MANUAL DE INSTRUCCIONES
TELÉFONO CELULAR DE ASISTENCIA
TEL-5085S

ESTIMADO CLIENTE

Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia.

Si necesita soporte adicional, no dude en escribir a: ***info@premiermundo.com***

PRECAUCIÓN

RIESGO DE CHOQUE ELÉCTRICO , NO ABRA

Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.

Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad que constituye un riesgo de choque eléctrico.

Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.

LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTA

Nos reservamos el derecho de modificar las especificaciones, características y/u operación de este producto sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.

CARACTERÍSTICAS PRINCIPALES

- Teléfono Celular Diseñado Para Adultos Mayores, Niños o Personas con Necesidades Especiales
- Práctico Botón SOS Que le Permitirá Almacenar Hasta 5 Números de Emergencia
- 1 Ranura para Tarjeta Micro SD / TF
- Teclas Extra Grandes
- Con Linterna LED
- Fácil de Usar
- Radio FM
- Transferencia de Datos Vía USB 2.0
- Teclado Luminoso
- Teléfono Celular con Tarjeta SIM Dual
- Pantalla 1.8” TFT QCIF
- Pixeles: 128x160, 262K
- Tiempo Apróx. en Modo de Espera: 120 Horas
- Multimedia: Video (AVI / 3GP), Audio (MP3 /

MID), Grabación, FM, Radio, Calendario, Calculadora, Alarma
- Frecuencia (MHz): GSM850 / 900 / 1800 / 1900
- Adaptador de Voltaje Automático AC100-240V 50 / 60 Hz

SEGURIDAD Y DESEMPEÑO

- Servicio de emergencia. En cualquier país, si usted quiere hacer una llamada de emergencia, llame al 911, pero hay que asegurarse de que el equipo está encendido y en un área de servicio para poder utilizar esta función. Cualquier red digital tiene servicio de llamada de emergencia “911” pero debe insertar una tarjeta SIM válida. Nota: Dependiendo de la naturaleza de la red celular, no se puede garantizar el éxito de todas las llamadas de emergencia.
- Por favor apague el dispositivo en lugares donde esto sea un requisito tales como sitios

médicos, hospitales, casas de reposo, etc., ya que estos lugares pueden tener equipos sensibles a señales externas de radiofrecuencia.

- Para los usuarios con enfermedades del corazón, preste especial atención al volumen del timbre de llamada entrante y a la configuración de la alerta vibrante.
- Se recomienda apagar el equipo en lugares de almacenamiento de combustible con gases explosivos. Aún en modo de espera, el equipo envía señales electromagnéticas.
- No utilice el teléfono celular mientras conduce un automóvil. Si es necesario comunicarse, detenga primer el automóvil.
- Si pierde su equipo o es robado notifíquelo de inmediato a su proveedor de servicios para desactivar la tarjeta SIM. Esto reducirá las pérdidas económicas en caso de que otras personas hagan llamadas en su lugar.
- Cuando se comunique con su proveedor de

servicio ellos necesitarán conocer el número IMEI de su teléfono. Éste se encuentra impreso en la etiqueta en la parte posterior del teléfono (retire la batería para verlo, o marque *#06#* para conocer el número). Copie el número y guárdelo para futura referencia.

- No retire la batería directamente en el modo de espera, ya que esto puede dar como resultado pérdida de información.
- No permita que los niños jueguen con el teléfono celular, el cargador o la batería.
- No intente reparar la unidad usted mismo. Remita toda revisión, mantenimiento y reparación a personal de servicio técnico calificado.

RECOMENDACIONES

- El teléfono celular contiene circuitos electrónicos sofisticados, imanes y un sistema de batería que deben ser manejados

con cuidado. Tenga en cuenta los siguientes puntos.

- No permita que celular ni los accesorios entren en contacto con líquidos ni los coloque en lugares húmedos.
- No utilice celular en lugares con temperaturas muy altas o muy frías.
- No coloque el celular cerca de fuego abierto o cigarrillos.
- No pinte el celular con aerosol.
- No coloque objetos en el interior de celular.
- No permita que el teléfono se golpee.
- No coloque el teléfono ni la batería en lugares por encima de 60 °C como el compartimiento del automóvil ni lo ponga a los rayos directos del sol.
- No intente desarmar el teléfono ni otros accesorios.
- Utilice únicamente una prenda humedecida y anti estática para limpiar el teléfono. No utilice una prenda seca o con estática. No

utilice químicos ni limpiadores abrasivos ya que estos dañan el acabado del teléfono.

- En el uso normal del teléfono, éste se calentará; también sucederá cuando se esté cargando.
- No deje el teléfono mucho tiempo sin batería o sin energía ya que se puede perder alguna información.
- No coloque el teléfono en el bolsillo de atrás de su pantalón para evitar dañarlo al sentarse. Tampoco lo coloque en el fondo de una cartera para evitar que se golpee o que esté comprimido.
- Si la función de vibración está activa, mantenga el teléfono alejado de fuentes de calor (tales como radiadores), y evite colocarlo en los bordes de las mesas ya que podría caerse por la vibración.
- No genere cortocircuito a la batería, ya que se dañará y podría generar un incendio.
- Cuando la batería termine su vida útil llévela

a un lugar especializado en su área donde se recojan baterías. No la bote a la caneca ni la incinere.

- Utilice únicamente una batería exactamente igual como reemplazo.
- En caso de que la batería se dañe, evite el contacto con ella. Si entra en contacto con la piel, lave con abundante agua, y si necesario, busque ayuda médica.
- Por lo general, la radiofrecuencia no tiene ningún efecto en los sistemas electrónicos del automóvil como por ejemplo el freno bloqueado, control de temperatura y sistema de inyección de combustible. Los fabricantes de estos equipos le informarán si tienen la adecuada protección. Si se sospecha de alguna falla causada por radiofrecuencia, contacte a su proveedor de automóvil, y no utilice el teléfono celular en el automóvil antes de que los técnicos hagan la verificación.

DESCRIPCIÓN

El teléfono tiene diez botones numéricos, un botón de linterna lateral, un botón de SOS, motor de vibración interno, audífonos, un adaptador, un cable de micro USB y un cargador de escritorio.

Íconos:

	Señal		Modo vibrante
	SMS		Audífonos insertados
	MMS		Audífonos conectados
	Timbre		Llamada perdida
	Alarma activada		Carga de la batería

INTRODUCCIÓN

TARJETA SIM

Retire la tapa posterior presionando suavemente hacia abajo. Coloque la tarjeta SIM en la ranura. El teléfono tiene soporte por dos tarjetas SIM.

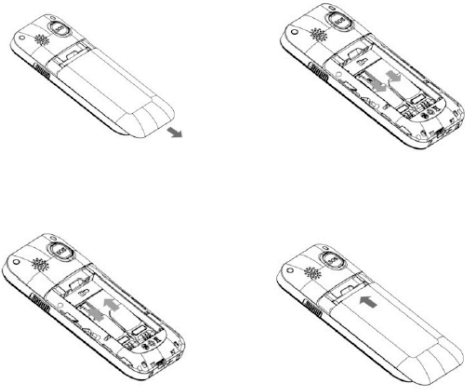

TARJETA DE MEMORIA

Si necesita capacidad de almacenamiento extra, coloque una tarjeta de memoria. (El teléfono celular utiliza una tarjeta de memoria T-Flash). Una vez retire la batería, deslice la tapa de la tarjeta T Flash hacia la izquierda y levántela. Coloque la tarjeta en la ranura y de nuevo la tapa.

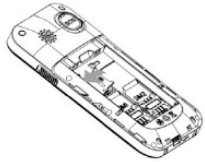
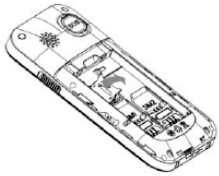
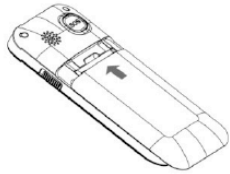

INSTALACIÓN DE LA BATERÍA

Retire la tapa presionando ligeramente y deslizando hacia abajo. La batería tiene una pestaña con una flecha la cual apunta al lugar de conexión. Sostenga la pestaña e inserte la batería de tal forma que los 3 pines estén en

contacto, y luego baje la batería.

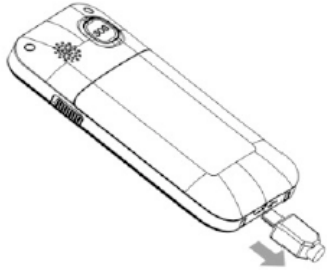

Coloque la tapa posterior sobre la pestaña que está ahora plegada hacia abajo apuntando a la base del teléfono. Deslice la tapa a la posición correcta. La siguiente ocasión que retire la tapa usted podrá retirar la batería simplemente levantando la pestaña.

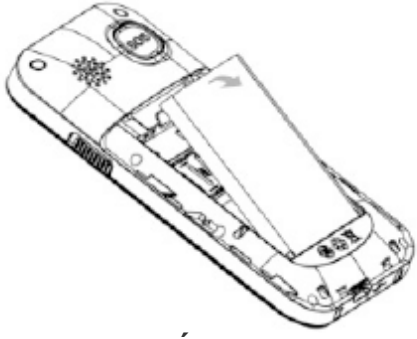

CARGAR LA BATERÍA

Una batería nueva alcanza su máximo desempeño después de cargarse y descargarse varias veces. Cuando la batería se haya descargado, cárguela por completo. Una vez termine cargarse retírela del cargador o apague el teléfono. Mientras carga la batería se mostrará un icono en pantalla indicando el proceso de carga. Cuando termine, el icono dejará de moverse. Mientras carga la batería es probable que se caliente un poco; esto es normal.

USO DE LA BATERÍA

El desempeño de la batería depende de varios factores incluyendo la configuración de la red, la fuerza de la señal, la temperatura, las funciones que elija, los accesorios, el tiempo que utilice el teléfono en llamadas, los datos y otras aplicaciones. Para lograr el máximo desempeño de su batería tenga en cuenta que una batería nueva o que no se ha utilizado por un periodo prolongado requiere gran cantidad de carga.

CÓDIGO PIN

El código PIN1 es un código de identidad personal para ingresar a la tarjeta SIM y que previene que otros utilicen la tarjeta SIM sin su autorización. Si la protección de su teléfono con código PIN está activa, en la al teléfono se verá en la pantalla de inicio el mensaje “Introduzca el PIN”. Al introducir este código, se verán asteriscos (*) en lugar de los números como tal. Usted puede obtener el código PIN1 por parte de

su proveedor de servicios.

El código PIN2 es un código de identificación personal que se utiliza para algunas características especiales proporcionadas por su proveedor de red como por ejemplo cobro de llamadas.

Si el código PIN está bloqueado, debe utilizar el código PUK (código personal de desbloqueo). Si estos dos códigos no los obtiene con la tarjeta SIM, consulte a su proveedor de servicios.

Importante: si introduce el código PIN incorrectamente tres veces, la tarjeta SIM se bloqueará y deberá contactar a su proveedor de servicios para desbloquearla.

FUNCIONES GENERALES

BOTÓN DE LLAMAR

Presione este botón para iniciar una llamada y también para contestar. En el modo de espera, presione este botón para conocer la lista de llamadas recientes.

BOTÓN DE COLGAR

Presione este botón para terminar la llamada. También lo puede utilizar para salir de los menús. Mantenga presionado por 2 segundos para apagar el teléfono y encenderlo.

Los dos botones anteriores también funcionan como “teclas suaves” según las funciones que aparezcan en la parte inferior de la pantalla.

BOTONES LATERALES

Presione este botón para encender y apagar la linterna.

BOTONES ARRIBA Y ABAJO

Botón Arriba: Accesos directos
Botón Abajo: Ingresar el menú

BOTONES NUMÉRICOS

En el modo de espera, utilice los botones numéricos para marcación rápida (una vez que haya registrado un número para el dígito correspondiente). Presione cualquier tecla entre 2 y 9 por más de dos segundos para marcar el número grabado. El número 1 funciona para acceder al correo de voz. Presione el botón numeral (#) por dos segundos para activar el modo de silencio o volver al modo normal. Presione 0 en un mensaje de texto para introducir un espacio.

En el modo de marcación, mantenga presionado el botón asterisco (*) para luego introducir las teclas “+”, “P” o “W”; “P y W” son para llamar a una extensión, y “+” es para llamadas

internacionales. La diferencia entre las letras “W y P” es que la “P” es para pausa de 3 segundas y enviar directamente a DTMF. Con la tecla “W”, se mostrará una pantalla preguntando si el usuario desea enviar a DTMF.

NÚMEROS CON VOS HUMANA

Usted puede escuchar los números que marca con voz humana cada vez que presione una tecla. Esta función está activada por defecto. Si desea cancelarla vaya a Menú, configuración, perfil de usuario, personalizar, configuración de tonos, seleccionar voz humana, tono, clic o silencio.

IDIOMA Y MÉTODO DE ENTRADA

El inglés es el idioma por defecto.

MODO DE LLAMADA ENTRANTE

Elija una de las sienes opciones: timbre, vibrar, vibrar y luego timbrar, vibrar y timbrar.

SERVICIO STK

El servicio STK es una herramienta de la tarjeta SIM; ítems específicos del menú se determinan por la tarjeta SIM y la red. Cuando la red proporciona servicios y su tarjeta SIM también soporta el servicio, este se añadirá automáticamente al menú de servicios.

HACER UNA LLAMADA

- Introduzca el número telefónico y presione la tecla de llamar. Si necesita cambiar o corregir el número presione el botón de colgar e introdúzcalo de nuevo. La pantalla mostrará una animación cuando se esté marcando el número y mostrará cuando le hayan contestado.
- Presione el botón de colgar para terminar la llamada.
- Para hacer una llamada local introduzca el código de área y número telefónico.
- Para hacer una llamada internacional

presione el botón asterisco (*) para obtener el símbolo “+” y luego utilice los botones numéricos para introducir el código del país, el código de la ciudad y el número telefónico.

- Para hacer una llamada a un número con extensión, puede marcar el número luego la letra P seguido del número de la extensión, y el teléfono marcará automáticamente la ruta completa. La forma de insertar la P en la siguiente: presione continuamente el botón asterisco (*) por tres veces, y la pantalla mostrará la letra P.
- Para hacer llamadas telefónicas con extensión (sin utilizar la función “+”), marque el número telefónico, la tecla P, el número de extensión, y presione la tecla de llamar.
- Para hacer llamadas de emergencia marque el número 911.

OPERACIÓN BÁSICA

ENCENDER

Presione el botón de encender por 2 segundos. Si la tarjeta SIM no tiene contraseña, la pantalla mostrará una animación de encendido y luego se conectará a una red. Cuando se conecte, se mostrará el nombre del operador en la pantalla y podrá utilizar su teléfono normalmente. Si la pantalla muestra el mensaje “introduzca tarjeta SIM”, apague el teléfono y verifique que la tarjeta SIM esté puesta correctamente. Una vez que la tarjeta SIM esté puesta, la pantalla puede mostrar los siguientes mensajes:

1. “Introduzca la contraseña”
2. “Introduzca el PIN”
3. “No hay servicio”
4. “Sólo llamada de emergencia”
5. “Conectándose”

Si este no conoce el código PIN contacte a su proveedor de servicios.
La contraseña por defecto del teléfono es 0000.

APAGAR

Para apagar el teléfono mantenga presionado el botón de apagar por dos segundos. No apague el teléfono quitando la batería, ya que se puede dañar la tarjeta SIM y perder información.

ATAJOS

En el modo espera, presione el botón Arriba para ir a la función de radio FM y el botón Abajo para ir a la función de Alarma.

HACER LLAMADAS CON LA AGENDA

En el modo de espera, utilice la agenda para buscar números o nombres.

VOLUMEN DE LLAMADA

Durante la llamada, ajuste del volumen utilizando

los botones de volumen (arriba y abajo).

CONTESTAR LLAMADAS

Cuando haya una llamada entrante, presione el botón de contestar. El teléfono sonará o vibrará de acuerdo con la configuración que haya establecido. Si no desea contestar la llamada presione el botón de colgar. Si el teléfono está guardado en la agenda usted podrá ver quién está llamando.

MARCACIÓN RÁPIDA

El teléfono tiene 9 teclas para marcación rápida. Usted puede configurar cada botón con el número que desee. En el modo espera presione los botones del 2 al 9 para marcar rápidamente el número guardado. El número 1 está reservado por el correo de voz. Usted puede activar o desactivar esta función en el menú, al igual que el número que ha asignado.

ENVIAR SEÑAL DTMF

Cuando esta función está activa, durante una llamada, al presionar los botones asterisco y numeral (* y #), se enviarán al receptor en forma de señal DTMF. Si usted no inicia esta función, algunas funciones como la marcación de número de extensión no estarán activas. Sin embargo, esta función de señal DTMF está activa por defecto.

LLAMADA EN ESPERA

Si usted tiene el servicio de llamada en espera activo, durante una llamada haga clic en “opción” y verá un menú en pantalla como sigue:

Retener llamada
Terminar llamada
Nueva llamada
Agenda
Mensaje
Grabación de sonido

Silencio
DTMF

Nota: algunos ítems del menú sólo aparecen dependiendo de la circunstancia, o necesitan soporte de red local, como por ejemplo la función “nueva llamada”.

MENSAJES DE TEXTO
Cuando reciba un mensaje de texto (SMS), la pantalla mostrará el icono de mensajes sin leer. Haga clic para leer el mensaje.

MANOS LIBRES
Durante una llamada, usted puede elegir la opción de manos libres para entrar a este modo.

LLAMADAS PERDIDAS
El teléfono mostrará un icono en pantalla cuando tenga llamadas perdidas.

FUNCIONES PRINCIPALES DEL MENÚ

- *AGENDA TELEFÓNICA*
- *MENSAJES*
- *CENTRO DE LLAMADAS*
- *MULTIMEDIA*
- *ORGANIZADOR*
- *CONFIGURACIÓN*

AGENDA TELEFÓNICA
Opciones: Ver, Enviar Mensaje de Texto, Llamar, Editar, Borrar, Copiar, Configuración

Para guardar un nuevo contacto presione el botón Arriba y “Agregar nuevo contacto”. Presione OK para ver las opciones.

La agenda telefónica guarda la información de nombre, número telefónico, configuración de

timbre, etc. los contactos que guarde en la tarjeta SIM únicamente tendrán la información de nombre y número telefónico. La agenda telefónica guarda hasta 250 números.

MENSAJE

Opciones: Escribir Mensaje, Bandeja de Entrada, Bandeja de Salida, Borradores, Configuración.
(Nota: La función MMS no está activa para este teléfono).

Cuando envíe un mensaje de texto a través de la red, se mostrará en pantalla el mensaje “enviado”, lo cual significa que el mensaje ha sido enviado, pero no necesariamente que el receptor lo recibido. Para mayores detalles sobre el servicio de mensajes contacte su proveedor de servicio.

Para escribir mensajes, presione el botón numeral para cambiar el modo de entrada, y el botón asterisco para cambiar los caracteres.

Utilice los botones arriba y abajo para moverse a través del mensaje, y la tecla de regresar para borrar.

En la bandeja de entrada puede ver los mensajes de texto que ha recibido. Aquí puede borrar, editar, reenviar o borrarlos todos. En la bandeja de salida se guardan los mensajes que están pendientes para enviarse. Aquí puede enviar, editar, borrar, copiar al teléfono, mover al teléfono, borrar todos, copiar todos, mover todos, o usar el número. En configuración de mensaje de texto puede hacer algunos ajustes a los mensajes.

CENTRO DE LLAMADAS

Opciones: Llamada en Espera, Desvío de Llamadas, Bloqueo de Llamadas, Cambio de Línea.

Configuración Avanzada: Remarcado Automático, Recordatorio de Tiempo de

Llamada, Modo de Contestar

MULTIMEDIA

Algunas de estas funciones no se pueden utilizar sin aumentar la memoria del teléfono, como se indicó al comienzo de este manual. En este menú encontrará: Visor de Imágenes, Reproductor de Audio, Radio FM.

Administrador de archivos

Aquí puede ver la cantidad de memoria utilizada y disponible del teléfono y la tarjeta TF.

Visor de imágenes

Con esta función puede visualizar las imágenes y acceder a las funciones de control como ver, enviar, cambiar nombre, borrar, etc.

Reproductor de audio

Utilice esta función para reproducir los archivos de música o tonos. Una memoria adicional es

requerida.
Botón 5: Reproduce / Pausa
Botón 4/6: Seleccionar las pistas a reproducir
Botón *: Bajar Volumen
Botón #: Subir Volumen
Botón Arriba: Elegir una reproducción sencilla y el orden de reproducción.
Botón Abajo: Repetición y reproducción aleatoria.

Radio FM
Utilice esta función para conectarse a la radio y escuchar sus estaciones radiales favoritas.
Botón Arriba: Elegir canal
Botón 5: Pausar / Reiniciar
Botón 4/6: Búsqueda precisa
Botón *: Bajar Volumen
Botón #: Subir Volumen

Conectar al computador
Utilice esta función para transferir archivos entre

el computador y el teléfono celular. Conecte el cable USB para hacer la transferencia. El computador mostrará el mensaje para seleccionar las opciones “Mass” o “Com”, seleccione “Mass”. Siga las instrucciones en pantalla. Si tiene archivos guardados en la tarjeta TF en su teléfono celular, seleccione la fuente (el teléfono o la tarjeta) para ver los archivos del computador.

ORGANIZADOR

Opciones: Configuración de Llamada de Emergencia, Configuración de Marcado Automático, Calendario, Alarma, Calculadora, Administrador de Archivos.

Configuración de llamada de emergencia

Active o desactive esta función. También puede introducir hasta 5 números de emergencia y editar el mensaje de texto de emergencia. Nota: cuando presione el botón de emergencia el teléfono enviará inmediatamente un mensaje de

texto de emergencia al teléfono celular que usted haya configurado.

El teléfono llamará al primer número de emergencia guardado y si no hay respuesta, llamará al siguiente y al siguiente hasta que un número conteste. Al contestar, el teléfono irá automáticamente al modo de manos libres para que no tenga necesidad de presionar ningún botón.

Tenga en cuenta que si un teléfono entra directamente al correo de voz, el teléfono entenderá que ha contestado y no marcará el siguiente número.

Configuración de marcado automático

Introduzca números telefónicos que corresponden a los números del 2 al 9 para marcado automático.

Calendario
Aquí puede tener una vista el calendario.

Alarma
Puede configurar hasta cinco alarmas

Calculadora
Contiene las funciones básicas de una calculadora.

CONFIGURACIÓN
Opciones: Configuración de Doble SIM, Perfil de Usuario, Configuración de Teléfono, Configuración de Red, Configuración de Seguridad, Conectividad, Restaurar Configuración de Fábrica.

Configuración de usuario
Elija uno de los siguientes modos: General, Reunión, Exterior, Interior, Audífonos. Estos perfiles también se pueden seleccionar como

Atajos. Seleccione “activar” para activar el perfil o “personalizar” para modificar los detalles: Tono, Volumen, Tipo de Alerta, Tipo de Timbre, Tono Extra.

Configuración de teléfono

Aquí tiene varias funciones: fecha, hora, luz de aviso, programación de encendido, idioma, método de entrada de texto, pantalla, modo de vuelo, luz de fondo y brillo.

Configuración de red

Elija entre manual y automática.

Configuración de seguridad

Aquí puede cambiar la contraseña de la tarjeta SIM. Puede bloquear o desbloquear el teléfono con el uso de la contraseña. Puede bloquear automáticamente teclado.

Conectividad

Puede utilizar Bluetooth en su teléfono.

Restaurar configuración de fábrica

Utilice esta opción para regresar a los valores iniciales del teléfono.

RESOLUCIÓN DE PROBLEMAS

Esta lista es para ayudarle a resolver problemas simples que pueden presentarse en el uso del producto. Por favor léala y verifique estos puntos antes de solicitar ayuda de personal de servicio técnico autorizado.

PROBLEMA	CAUSA Y SOLUCIÓN
El teléfono no enciende	Verifique el estado de la batería y que esté puesta correctamente
Se muestra un error de tarjeta SIM	Verifique que esté bien puesta y que esté limpia; intente quitarla y volverla a poner
La recepción de la señal no es buena	Verifique el indicador de señal; intente cambiar de área

No se pueden hacer llamadas	Verifique el indicador de señal; verifique que haya servicio
La batería no carga	La batería se podía haber sobre-descargado; conecta el cargador y espere 30 minutos y observe si carga
No se puede conectar a la red	La señal es muy débil o hay interferencia de radio; verifique que haya servicio

ESPECIFICACIONES

Frecuencia	Bandas (900/1800/850/1900)
Tamaño de pantalla	1.77”
Resolución	128x160
Tarjeta SIM	Tarjeta SIM dual
Agenda	300
SMS	50
Memoria	24+32M

Batería	600mAh
Dimensiones	109x50x14.5
Peso	80g

- Las personas y/o Marcas registradas en este manual de instrucciones no están afiliadas a Premier Electric Japan Corp. y aparecen en este Manual con propósitos ilustrativos únicamente.

INSTRUCTION MANUAL
ASSISTIVE CELLPHONE
TEL-5085S

DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

If you need extra support, please write to ***info@premiermundo.com***

CAUTION

RISK OF ELECTRIC SHOCK, DO NOT OPEN

Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.

.

This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock. This sign means that there are important instructions of operation and handling in the manual that comes with this device.

PREMIER CUSTOMER SERVICE

Venezuela:	0800 – ELECTRIC (353-2874)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE

This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

SAFETY AND PERFORMANCE

◆ Emergency services

In any country, if you want to make emergency call, dial 911, but you need to make sure the power is on and within a service area, then you can use this function.

Any digital network has “911” emergency call service. but you must insert valid SIM card.

Note：As determined by the nature of cellular network, not all emergency calls can be guaranteed success.

INDIVIDUAL

♦ Please switch the device off at places with the requirement, such as medical sites like hospitals and rest homes etc., as these sites may be using equipment sensitive to external RF signals.

♦ For users with heart disease, pay special attention to incoming call ring volume and vibrating alert settings.

♦ In the fuel storage areas chemical plants with explosive gases, or explosives production sites, pay close attention to the use and limitations of RF

equipment. In standby mode, your mobile phone will send electromagnetic signals. If required, you should switch off the phone.

♦ Pay attention to traffic safety. Do not use mobile phone while driving, if is necessary, park your car first.

♦ If your phone is lost or stolen, immediately notify the service provider to disable the SIM card. This will reduce your economic losses in case others make phone calls instead.

♦ When you contact the service provider, or its outlet, they need to know your phone's IMEI number. It is printed on the label on the back of the phone (remove the battery to see) (or dial "* # 06 #" see IMEI number). Please copy down the numbers and save for future needs.

♦ Do not remove the battery directly at standby mode; this may result in the loss of user data.

♦ Do not let children play with mobile phone, charger or battery.

Mobile phone

Mobile phone contains sophisticated electronic

circuitry, magnets and battery systems and should be handled with care, especially note following points:

♦ Whenever possible, do not let the phone and its accessories contact with liquid or in a humid environment.

♦ Do not place the phone in environment with temperature too high or too low.

♦ Do not place the phone near flame or a lit cigarette.

♦ Do not graffiti on the phone.

♦ Do not put anything inside the phone.

♦ Do not drop or bang the phone violently.

♦ Do not put the phone or battery at places exceeding 60 ℃, such as car dashboard, window sill or glass sill in direct sunshine.

♦ Do not try to disassemble the phone or any other accessories.

♦ Use only damp or anti-static cloth to clean the phone. Do not use dry or cloth with static. Do not use chemicals or cleaners containing abrasive ingredients, which may damage the case

♦ In normal use, the phone will become hot; the phone will also be hot when charging.

♦ Do not let the phone stay long without battery or no power, as it may cause the loss of some data.

♦ Do not put the phone in the back pocket of your trousers or skirt to prevent damage to the phone when you sit down. Also do not put the phone in the bottom of the bag to prevent the phone from hit or strong compression.

♦ If vibration function turned on, keep the phone away from heat sources (such as radiators), and avoid the phone to slip from desktop due to vibration.

Battery

♦ Do not short circuit the battery, which will damage the battery, generate heat and possibly cause a fire.

♦ Do not dispose of batteries in a fire, it may explode. Used batteries should be returned to the provider, or placed on designated collection points, do not put in household garbage.

♦ The battery built into the phone can be replaced only by professional maintenance engineers. If use wrong type of battery, it may cause explosion. Please dispose used battery according to manufacturer's instructions.

♦ It will be potentially dangerous to use non-appointed battery and charger. The damage caused by this is out of the range of warranty.

♦ Note：If the battery is damaged, avoid contact with things inside. If contact with skin, wash with plenty of water, if necessary, should seek medical help.

♦ Driving a Car; you must be in control, please focus on driving.

♦ Please observe local traffic safety laws and regulations in all its provisions.

♦ Generally, RF has no effect on vehicle electronic systems such as locked brake, fixed degree control and fuel injection system. Manufacturers of such equipment will tell you whether these devices have good shielding function. If you suspect a car fault is caused by RF, please contact the car dealer, and do not use the phone in car without prior checking of qualified installers.

Other manufacture equipment

Use of other manufacturer's non-authorized equipment, cable or accessories may cause invalid the warranty, Maintenance service

Mobile phone, battery and charger are not user self-serviceable parts. It is recommended to send your phone to the designated repair facility for service.

APPEARANCE

Your phone has 10 numeric keys, and 1 side torch key, SOS button, built-in vibration motor, an earphone, an adapter, micro USB cable and a desktop charger.

Icons:

	SIGNAL SIGN		VIBRATING MODE
	SMS		EARPHONE INSERTED
	MMS		EARPHONE PLUGGED IN
	LONG RING MODE		ALARM ACTIVED
	MISSED CALL		BATTERY CAPACITY

2.GETTING STARTED

2.1 SIM card installation

Remove the back cover by pressing down slightly on the back cover.

Slide the Sim card into the slot shown,

See figure 1:

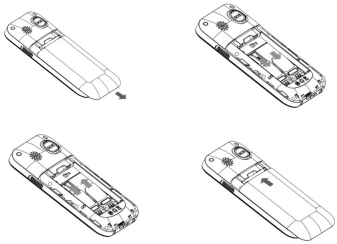

Note: this device support Dual SIM cards.

2.2 Memory card installation
If extra storage capacity is required you can install a memory card. (This device uses T-FLASH memory card).
With the battery removed, slide the T Flash card cover towards left direction and lift it up. Place the card in the holder and then replace the cover and slide it towards right a little bit to lock it.

See figure 2

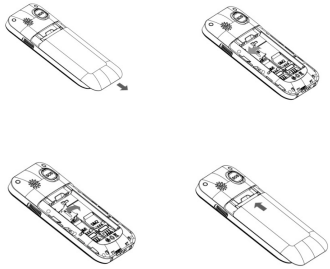

2.3 Battery installation
Remove the back cover by pressing down slightly and sliding towards the base. The battery has a tab with an arrow on it, this points to the top of the phone and will make placing and removing the battery much easier. Hold the tab and insert the bottom end of the battery first so that the three pins align with the 3 contacts on the battery, then lower the battery into the phone as shown.
See figure 3

Bring the back cover down over the tab which is now folded down pointing to the base of the phone. Slide the cover in place. Next time you remove the cover you will be able to remove the battery simply by lifting the tab.
See figure 4

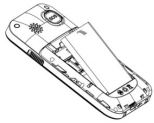

2.4 Charging the battery
New battery will achieve optimal performance after fully charging and discharging several times.
When the battery is exhausted, please recharge it, excessive discharge can damage your battery.
After the battery is fully charged, please remove it from the charger and disconnect or turn of the power

When charging, the battery capacity icon on the screen will show animation from right to left. If fully charged, the animation will stop.
When charging, battery may become very warm, it is normal.

2.5 Battery use
Battery performance is influenced by many factors, including your carrier network configuration, signal strength, the temperature while using the device; the functions you choose and use, accessories and voice, data or other application mode.
In order to achieve the best battery performance, please observe the following rules:
New battery or long-time unused battery needs lengthy charging If the battery has been set aside for a long time or the battery power is very low, it may take some time to show it is charging Please wait and after about 15 minutes it will show charging
Note: For your safety and care for environment, please take care when disposing of batteries
Warning： Any kind of battery short circuit may cause explosion, fire or personal injury and other serious

consequence!

2.6 PIN code

PIN1 code：the personal identity code to enter SIM card, it can prevent others from using your SIM card without your permission. If your phone pin code protection function is activated, when switching on, the screen will display “Enter PIN”. When input PIN code, “*” will instead the content. You can get PIN code together with SIM card from network operator.

PIN2 code：the personal identity code needed when use some special features provided by network such as call billing.

PUK and PUK2 code（8 digit）

To change the blocked PIN code, PUK code (personal unblocking key) is needed. To change the blocked PIN2 code, PUK2 code (personal unblocking key) is needed.

If these two codes are not provided with SIM card, ask your local service supplier.

Warning： If you input the wrong PIN code three times, SIM card will be blocked, please contact the

network operator for help decoding.

3 · BRIEF INTRODUCTION TO YOUR DEVICE

3.1 Call key/OK Key

Used to initiate the call (when phone number is input or already in the phonebook), also used to answer the call. In standby mode, press this key to display recent call records (all received\missed\dialed numbers); in standby mode, pressing the key twice will dial the last number called. .

3.2 Power on/off key, End call, cancel key

Long press the key for 2~3 seconds to switch on/off the phone.

Used to end the call in call mode, to end the conversation in talk mode, or exit the menu to standby mode or cancel an incorrectly entered number.

Both of these keys also operate the “Soft Keys” when they are displayed in the lower left and right of the screen

3.3 Side keys

Right side Torch on or off key, slide up or down to operate

3.4 Up\Down Keys

In standby mode

Up Key to enter Shortcuts

Down Key to enter Menu

Press up/down key to select sub menu, then press OK key to enter.

(above need to accord to final software)

(this can be confirmed now)

3.5 Numeric keys

In standby mode, 1-9 keys enter numbers and characters, to make speed dial (once a number has been allocated). Press any key of 2-9 for more than 2 seconds; you can quickly dial the numbers in speed dial list.

Note： long press “1” key in standby mode means call voice mail service; this number needs to be set to voice mail center number in advance.

Key

Press for 2-3 seconds to enter Silent mode or back to General mode.

Press 0 when in text mode to enter a space.

In number dial mode, continuously short press “*” key, you can enter either “+”, “P” or “W”; “P &W” is to call an extension, “+” is for international calls.

Tip： the difference between “W、P” is that, P is to pause for 3 seconds and then send DTMF directly ，W will have a window pop up asking the user whether to send DTMF.

3.5.1

Keypad human voice response

You can hear numbers called in human voice when you press each key.

The phone is default to Human voice on

To set to on, Menu-settings-User profiles-(select profile like General) customize-select tone settings-keypad- select Human voice or Tone or Click or Silent.

3.6 Language and input method

. English is the default

3.7 Incoming call mode

Your phone has built-in vibration and buzzer; you can set the following call patterns in profiles:

Ring
Vibrate
Vibrate then ring
Vibrate and ring

3.8 STK Service

STK Service is SIM card toolkit, specific menu items are determined by SIM card and network. When the network provides services, and your SIM card also supports the service, it will be automatically added to the mobile service menu.

3.09 Making a call

υ Making a call, the simplest way to make a phone call is to use numeric keys to enter the phone number, and then press Call key. If you need to change or correct a number, please press end key to delete it. The screen will display call animation when dialing and display talk status information when

connected.

- Press end key to disconnect.
- Make domestic phone call: area code - phone number - call key

Make international phone call

- Press “*” key to obtain the “+” symbol then use numeric keys to enter country code, city code, phone number (for example, UK is “+” -country code is 44 – area code- number then press “call key”

Make fixed telephone extension call

- Some fixed telephone extension cannot get through directly, you need to dial the switchboard first, then the extension. If you enter a phone number, and insert “P” between switchboard number and extension number, the phone will dial it for you automatically. The way to insert “P” is as follows: continuously press “*” key for three times (then the screen will display “P”).
- Make fixed telephone extension (without “+”) Phone number + “P” +extension number + call key

Emergency call

In any country using digital GSM network, if you are

in network coverage (you can check the network signal indicator on the top left of the screen), you should be able to call emergency services If your ISP does not provide roaming service in the region, the display will show "can make emergency calls (EMERGENCY CALLS ONLY)", to tell you can only carry on that call. 911 (emergency call) service, provided by the network operator services, if different, consult the network operator!

IMEI

It is International mobile phone identification number. Switch off the phone and remove the battery; you can see this number printed on the barcode label on the back of the phone. This number is also stored in the phone, switch it on and enter "* # 06 #" to display.

4. BASIC OPERATIONS

4.1 Switch on

Press Power key for 2-3 seconds to switch the phone on. If SIM card has no password, the screen will display power-on animation, and then automatically search for the network. When the phone registers to

the network, the network operator's name will appear on the screen, and then you can make and answer calls.

If the screen displays "please insert SIM card", switch the phone off, check whether your SIM card is correctly installed or not.

Insert SIM card, the phone will automatically verify whether the SIM card is available or not, then the screen will display following prompt in order:

1) "enter the phone lock password "——if you enable the phone lock

2) "enter PIN"—— if you enable SIM lock

3) "no service"—— network register fail, the phone cannot perform network services

4) "emergency calls only"—— register to other network, only allowed to dial "911" "searching"—— the phone is searching for network,

Note：If you do not know PIN code, contact your network provider.

The default phone password is "0000".

4.2 Switch off

If want to switch off the phone, long press end key

until the screen displays power-off animation. Do not switch the phone off by removing the battery directly, it can damage SIM card and may lead to the loss of some information.

4.3 Shortcut functions

In standby mode, press Up key to FM function and press Down key to Alarm.

4.4 Make calls

- Enter phone number on the keypad (if enter wrong character, press end key to delete), press call key to start the call. To end or cancel the call, press “cancel” or power key;
- Use the phonebook to make call: enter phonebook in standby mode by short press end key, find names/phone number, press call key to start the call.

- Redial the recent dialed phone number: in standby mode, press call key, you can view last phone numbers and name list. Scroll to the desired number or name, press call key to start call.

4.5 Adjust receiver volume
During talk, adjust the volume by press + - volume keys (Up and Down key).

4.6 Answer calls
When there is incoming call, it will prompt in the way of ring\vibrate\ring and vibrate\ring then vibrate, according to the phone settings.
To answer a call, press Call key.
To refuse a call, press power key
If you have applied the calling number identification service, the caller's phone number will be displayed on the screen. If the number is stored in the phonebook, the name corresponding to the number will be displayed on the screen.

4.7 Dial/Speed dial
Your phone has 9 speed dial keys. You can customize these keys to correspond to the phone number. In standby mode, long press [2~9.0] key, you can quickly speed dial a call; [1] key is the specific number for voice mail speed dial, once set

with the voice mail number, it can be used.
Note： Speed dial set up, Menu－organizer-speed dial-set number-Select number (2－9) or (*#)-edit-select number from phonebook-OK.
To change or delete a number select number as above and – options

Note. To enable speed dial; menu-organizer-family numbers-status-on or off.
Default is 'On"

4.8 Send DTMF signal
When set "send DTMF signal" function, during a call, when you press numeric keys and "*" "#" keys，they will be sent to the receiver in the form of DTMF signal. If you do not start this function, dial extension number and some other functions may not achieve. Default is on.

4.9 Call hold
If you have the "call hold" service, during a call click "option", function menu appears as follows:

- Hold single call
- End single call
- New call
- Phone book
- Message
- Sound recording
- Mute
- DTMF

Note：Some menu items only arise in certain circumstances, or need local network support, such as “new call”.

4.10 Message display

SMS

When the user receives an unread short message, the screen displays an unread message icon; the user can click to read the message

.4.11 Hands free

During a call you can select options-hands free to enter into hands free conversation.

Missed call

When the user misses a call, the screen displays a missed call icon, the user can click to view the missed call.

5.MAIN MENU FUNCTIONS

Phonebook
Messages
Call center
Multimedia
Organizer
Settings

5.1 Phonebook
In this menu-options
View
Send text message
Call
Edit
Delete
Copy
Phonebook settings

5.1.1

To store a number in phonebook
In standby mode press End key
Use Up key to highlight “Add new contact”, press OK to enter options
Press OK to Select
name, enter name, save, highlight number, enter number save

Your phonebook stores information such as: name, phone number, ring set, , Others contact stored in SIM card can only have the name and phone number stored.

λ The phone support 250 phone numbers

Add contact
In SIM card: a record includes name and phone number.
In phone: a record includes name, phone number, ringtone select, incoming call groups.
Delete: delete all the records in SIM card or in the phone, or delete one by one.
Phone Settings
Perfered storage:
SIM, phone, and All, defaulted All

Extra numbers:
Memory status: means storage status
view the current use of the phone book, including SIM card and phone memory. Display format: “used capacity / total capacity.”

5.2 Message
In this menu you will find
Write message
Inbox
Outbox
Drafts
SMS settings
note: MMS not available for this device

5.2.1 Send a message - Menu-phonebook-options-send text message-
Note： when you send short messages through network service, the phone may display “sent”, it means the message has been sent to the message center mailbox set in the phone. Does not mean the counterpart has received the message. For more details about messaging service, contact your

network provider.

5.2.2 Write messages

Press "#" key to switch the input mode (displayed in top left of screen), press "*" key to select the symbol input, up\ down key to select character, press to enter the character Press up\down key to move the cursor, and then back / delete key to delete the corresponding words and characters,

5.2.3 Inbox

You can view received short messages in Inbox.

Reply: reply the received messages by text

〃 Delete: delete the current short message

〃 Edit: edit the current short message or edit then send

〃 Forward: forward directly or edit then forward to others

〃 Delete all: delete all the short messages in Inbox

5.2.4 Outbox

When sending a message, select "save and send", the message will be saved to outbox; can also save

the text you edit directly to outbox, in outbox it is shown as "no number", that is, no transmission destination; if fail to send your message, the message will be saved to outbox. You can operate messages saved in outbox: to send, edit, delete, copy to the phone, move to the phone, delete all, copy all, move all, use number.
Commonly used phrases
Edit or delete the commonly used phrases

5.2.5 SMS settings
You can set some parameters of SMS in this menu.

5.3 Call centre
In this menu you will find
call settings:
in this menu, you can use Call waiting, Call divert, Call barring, Line switching
Advanced settings:
Press ok to enter this menu, you can use Auto Redial function, and Call time reminder, also choose Answer

mode

5.4 Multimedia

To increase the size of the memory, see Getting Started-Memory card installation. Some functions may not operate without additional memory.

In this menu you will find

Image viewer

Audio player

FM radio

5.4.1 File manager, View memory used/unused in Phone and TF card

Use up/down keys to select Phone or Memory card

5.4.3 Image viewer, view photos and enter options View, Browse style, Send, Use as, rename, Delete, Sort by, Delete all files, Storage (memory card or phone)

5.4.1 Audio player, play downloaded music files or ring tones. Additional memory may be required.

“5”key to pause and play.

“4”key and” “6” key to select songs to play.

"*"key to turn down volume, "#"key to turn up volume.

"up"key to choose single play and order play.

"down"key to choose circle play and random play.

5.4.2 FM Radio, Select "options" to view and select from channel list, Manual input to select detailed channel, auto search to set up channel list.. .
Up and Down key to choose channel.

"5"key to pause and restart.

"4"key and" "6" key to search more accurately.

"*"key to turn down volume, "#"key to turn up volume.

5.4.3 Connect to PC. To download or upload pictures music and data, connect the USB cable to the mini USB port on the phone and connect the USB to the computer.
The computer screen will show Mass or Com, select Mass. Follow the on-screen prompts to open the files. If you have a TF storage card in your phone then select either TF or phone storage on the computer to

view the files (both will be displayed in ‘my computer’.

5.5 Organizer
In this menu you can find
SOS Emergency setting
Speed Dial setting
Calendar
Alarm
Calculator
File manager

5.5.1 SOS Emergency setting
Select Status on or off, this can also be done from shortcuts. If you select status “Off” then the SOS button will not operate.
SOS number, you can enter up to 5 numbers
Edit SOS SMS message.

NOTE, When SOS button is pressed the phone will immediately send SMS emergency message to any mobile number stored in SOS memory.
The phone will then ring the first number stored and if no answer, it will ring stored numbers 2 and 3 until a

number is answered. When answered, the Phone will go direct to Hands free mode so there is no need for the user to press any answer button.
NOTE, Check SOS operation with numbers after they have been entered and saved.
If a dialed phone number answers in voice mail/message then it will be assumed the phone has been answered and will not ring the next number in turn. Please be aware of this when selecting SOS numbers to enter.

5.5.3 Speed dial and Family numbers
Menu-organizer-family numbers
Status, select “On” (default setting) to enable speed dial.
Set number. The speed dial numbers from 2 -9 can be set.
Select speed dial key number and then the number to be entered can be selected from the phonebook.
Family special number * (Female) and # (Male) can be entered in the same way.

5.5.4 Calendar. Select to view calendar for month or

enter date for viewing other months.

5.5.5 Alarm, you can set and edit up to five separate alarm settings

5.5.6 Calculator. The calculator is designed for simple use and has limited accuracy.

5.6 Settings
In this menu you can find,
Dual SIM settings
User profiles
Phone settings
Network settings
Security settings
Connectivity
Restore factory settings

5.6.1 User Profiles
Set and select profiles for General, Meeting, Outdoor, Indoor, Headset. Can also be set from the Shortcuts

Select “activate” to activate the required setting or

“customize” to change details for each setting as follows.

TONE SETTING.
Change incoming call tone, alarm tone, Power on tone. Power off tone, Message tone, Keypad tone (includes voice option)
VOLUME
Adjust Ring tone and Key tone volumes
ALERT TYPE
Set for Ring Only, Vibe Only, Vibe and Ring, Vibe then Ring
RING TYPE
Set for Single ring, Repeat or Ascending
EXTRA TONE
Select option of a tone for a Warning, Error, Camp on, Connect

5.6.2 Phone settings/time and date
Time and date setting
Signal light, turns on or off the blue signal indicator light.
Schedule power on/off. Up to four settings can be

made.
Language, Default is English
Preferred input method. For SMS the default is abc. You can change when inputting text by using the # key.
Display, you can change screen saver, power on and off displays, select if date and time to be shown (default is on)
Flight Mode, select Flight or Normal mode
Misc setting, LCD backlight, set brightness (select and use + or – side keys to adjust) For time on, to adjust time on, select and use + or – side keys.

5.6.3Network settings
Select network, automatic or manual selection.

5.6.5 Security settings
Sim security settings, select Sim lock or change password.
Phone lock, select on or off, password required.
Auto keypad lock, can select keypad to lock “on” after set time or none at all. Default is “none’
Change password, phone password can be changed.

Need input old password first.

5.6.6 Connectivity
you can use Bluetooth on your phone

5.6.7 Restore factory settings
You can restore settings to the default factory settings. Default password is 0000.
6 Appendix Ⅰ

COMMON FAULTS ANALYSIS

Fault Diagnosis	Possible Cause
Cannot switch on	1.The battery has no power; 2. The battery placement is incorrect.
SIM card error	1.SIM card is dirty, clean the SIM card; 2.re-install the SIM card; 3. SIM card is damaged, replace the SIM card.
Bad/poor reception	Check the signal strength indicator Try a better area

Phone can't call out	4Check signal strength Check you have service connected Check dialing not prohibited
Battery is not charging	1. The battery may have over-discharged, connect the charger and wait 30 minutes to see if it starts to charge. ; 2. Battery performance has deteriorated.
Cannot connect to the network	1.signal is too weak, or around the radio interference; 2. Check SIM card is installed correctly, SIM card is not damaged? Please contact and check with the network service provider.

SPECIFICATION:

Frequency	Quad band(900/1800/850/1900 MHz)
Screen Size	1.77" inch
Resolution	128*160
SIM Card	Dual SIM Card
Phonebook	300
SMS	50
Memory	24+32M
Battery	600mAh
Dimensions	109x50x14.5mm
Weight	80g